


 













 

 




 




Original	Sustituto	Original	Sustituto
Power	Power	Exit	Exit
Setup	Options	Recall	Back
Mute	Mute	Up	Up
1	1	Down	Down
2	2	Right	Right
3	3	Left	Left
4	4	OK	Ok
5	5	Vol+	Vol +
6	6	Vol-	Vol -
7	7	Page+	Ch +
8	8	Page-	Ch -
9	9	Red	Red
0	0	Green	Green
Info	Info	Yellow/Zoom	Yellow
FAV	Pre Ch	Blue/Option	Blue
Menu	Menu	TTX	Text
EPG	Guide	Sub.T	Subt





	Original	Sustituto	Original	Sustituto
	Tv/Radio	 TV/R		
	Audio	 Dual		
	Format	 Format		
	Aspect	 3D		
	Rec	 Rec		
	Goto	 Media		
	USB	 AV		
	T/S	 Smart		
	<<	 <<		
	>>	 >>		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		

