








 
























Original	Sustituto
	TV / Radio / 
	Shift +  +  Shift + 1
	Audio / Lang I/II 
	AV / Input / RDS 
	Power 
	 1
	 2
	 3
	Text / Goto 
	 4
	 5
	 6
	Subtitle / EQ 
	 7
	 8
	 9
	Sound / Title 

Original	Sustituto
	Fav / Marker / PC 
	0 
	Info / Angle 
	Setup / OPT / 
	Exit / Cancel / Clear 
	Up 
	Smart / List 
	Left 
	OK 
	Right 
	Vol+ 
	Down 
	CH+ / Page+ 
	Vol- 
	Mute / Dimmer 
	Back / Return 
	CH- / Page- 



