

































 







 

 



 

 

 



 

 



 

 







Original	Sustituto
	 Power
	 Sleep / Timer
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Smart / List
	 Info / Angle

Original	Sustituto
	 AV / Input / RDS
	 Audio / Lang I/II
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 Menu / Home
	 Right
	 Vol+
	 OK
	 >> / Tune+
	 CH- / Page-
	 Down
	 >> / Preset+
	 << / Tune-
	 I<< / Preset-
	 Red / Netflix / Search



