




































Original	Sustituto
	 Power
	 Smart / List
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Back / Return
	 TV/Radio /
	 Menu / Home
	 Guide / EPG / -/--

Original	Sustituto
	 Fav / Marker / PC
	 Up
	 Down
	 OK
	 Right
	 Left
	 Exit / Cancel / Clear
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Picture / Format
	 Zoom / Size



