


 


 
 
 


 




 



 



 








 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 Menu	 Menu
 Exit	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 AV
 TV Mode	 Smart
 S.Mode	 Shift + Dual

Original	Sustituto
 Text	 Text
 PG+	 Ch +
 PG-	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Recall	 Back
 Sleep	 Sleep
 Find	 Shift + TV/R
 TV / Rad	 TV/R
 Info	 Info
 EPG	 Guide
 FAV	 Pre Ch
 YouTube	 Media
 Red / M/P	 Red



