


 






Original	Sustituto
	
Power	Power
	
(*)	Subt
	
[≡]	Text
	
0	TV/R
	
[+]/◆	Info
	
?	Options
	
I-II/[≡i]	Dual
	
16:9/+	Format
	
(<>)/X	Exit
	
Inst	Smart
	
Input	AV
	
P<P	Pre Ch
	
P+	Ch +
	
P-	Ch -
	
Up	Up
	
Down	Down
	
Right	Right

Original	Sustituto
	
Left	Left
	
Vol+	Vol +
	
Vol-	Vol -
	
Menu	Menu
	
Red/Picture	Red
	
Green/Audio	Green
	
Yellow/Timer	Yellow
	
Blue/Headphon	Blue
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9





Original	Sustituto
 0	 0
 PP	 Back
 Mute	 Mute

Original	Sustituto

