 
 



 

 










| Original | Sustituto |
|--|---|
|  Power |  Power |
|  Eject/Open/Close |  Eject / Surround |
|  Power Tv |  Shift + Power |
|  DVD |  Shift + 2 |
|  VCR |  Shift + 4 |
|  AV |  AV / Input / RDS |
|  AV Tv |  Shift + AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  PR+ Tv |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  PR- Tv |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |

| Original | Sustituto |
|--|---|
|  9 |  9 |
|  Vol+ Tv |  Vol+ |
|  Title |  Sound / Title |
|  0 |  0 |
|  Mute Tv |  Mute / Dimmer |
|  Vol- Tv |  Vol- |
|  O)/Audio |  Audio / Lang I/II |
|  [...] / Subtitle |  Subtitle / EQ |
|  Camera/Angle |  Info / Angle |
|  Rec |  Rec / Rec Mode |
|  Rec Mode |  Shift + Rec / Rec Mode |
|  Timer Rec |  Sleep / Timer |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Pause/Step |  Pause / Step / Freeze |



