 

 
 
 
 

 




 
 
 





	Original	Sustituto		Sustituto
	Power		Power	Power
	Guide		Guide	Guide
	[ ]/Ratio		Subt	Subt
	Info		Info	Info
	Input		AV	AV
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	--		List	List
	TV		TV/R	TV/R

	Original	Sustituto		Sustituto
	Up		Up	Up
	Down		Down	Down
	Right		Right	Right
	Left		Left	Left
	OK		Ok	Ok
	Settings/List		Menu	Menu
	Back		Back	Back
	Exit		Exit	Exit
	Q.Menu		D. Menu	D. Menu
	FAV		Pre Ch	Pre Ch
	Mute		Mute	Mute
	Simplink		Media	Media
	Q.View		Options	Options
	Energy/Saving		3D	3D
	AV Mode		Format	Format
	Vol+		Vol +	Vol +
	Vol-		Vol -	Vol -



