 

 

 







 















 



 



 



 



 



 



 



 



 

 









Original	Sustituto	Original	Sustituto
 Power	 Power	 List	 Smart / List
 Energy/Saving	 Eject / Surround	 Settings	 Menu / Home
 TV/Radio	 TV/Radio /	 Q.View	 Display / Media
 Guide	 Guide / EPG / -/--	 Q.Menu	 D.Menu / Top
 Info	 Info / Angle	 Back	 Back / Return
 Ratio	 Picture / Format	 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 AD	 Audio / Lang I/II
 0	 0	 P+	 CH+ / Page+



