



 

 


 




 

 

 


 




Original	Sustituto
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Original	Sustituto
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Sound / Title
	Green / APP / Repeat
	Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original		Sustituto	
	[≡o]	TIMER SLEEP	Sleep / Timer
	Hold	HOLD	Stop / Hold
	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Mix / PIP Swap	LIST SMART	Smart / List
	PIP / Size	SIZE ZOOM	Zoom / Size
	PIP Down / [≡?]	PRESET-	I<< / Preset-
	PIP Up / Index	PRESET+	>>I / Preset+
	[TV]	PROGRAM TV/RADIO	TV/Radio /
	[AV]	RDS AV INPUT	AV / Input / RDS

Original		Sustituto	

