







 















 
 







 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 3D

Original	Sustituto
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep
 MTS	 Options
 Rec	 Rec





Original		Sustituto		Original		Sustituto	
	Guide		Guide		Size/Mouse		Format
	Red		Red		Hold/Refresh		D. Menu
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<</Index		<<				
	Play		Play				
	Pause/Cancel		Pause				
	>>		>>				
	I<</Sub.PG		I<<				
	>>I/Reveal		>>I				
	Stop/Mix		Stop				
	TTX		Text				
	CAP		Media				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	FAV		Pre Ch				

