






 

 



 

 
 

 
 
 

 
 

 
 


 











 
 
 




 

 



 


 

 


 

 

 





Original	Sustituto
 Power	 Power
 [=i]/Info	 Info
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=?]/Source	 AV
 O)/II/Audio	 Dual
 *	 Options
 Menu	 Menu

Original	Sustituto
 Exit	 Exit
 ♪	 Shift + Dual
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 [=♦]/[+]	 Format
 List	 List
 EPG	 Guide
 Recall	 Pre Ch
 [=]	 Text
 Play	 Play





Original	Sustituto	Original	Sustituto
Pause	Pause		
[≡+]/Still	3D		
Stop	Stop		
[≡o]/Subtitle	Subt		
Radio	TV/R		
Sleep	Sleep		
FAV-	Shift + Ch -		
FAV+	Shift + Ch +		
Red	Red		
<<	<<		
Green	Green		
>>	>>		
I<<	I<<		
Yellow	Yellow		
Blue	Blue		
>>I	>>I		
[≡x]/Repeat	D. Menu		

