



 

 

 

 



 

 

 

 











 











































| Original | Sustituto | Original | Sustituto |
|---|-----------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | DTV / ATV |  | D.Menu / Top |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Vol + |  | Vol+ |
|  | MTS |  | Audio / Lang I/II |
|  | CH + |  | CH+ / Page+ |
|  | Vol - |  | Vol- |
|  | REC List |  | Smart / List |
|  | CH - |  | CH- / Page- |
|  | FAV List |  | Fav / Marker / PC |
|  | REC |  | Rec / Rec Mode |
|  | Freeze |  | Pause / Step / Freeze |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Source |  | AV / Input / RDS |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |





| Original | Sustituto |
|--|---|
|  Display |  Display / Media |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  << / Guide |  << / Tune- |
|  << / Guide |  Guide / EPG / -/-- |
|  Play/Pause / Timeshift |  Play / Slow |
|  >> / Aspect |  >> / Tune+ |
|  I<< / Cancel |  I<< / Preset- |
|  >>I / Subpage |  >>I / Preset+ |
|  Stop / Index |  Info / Angle |
|  Stop / Index |  Stop / Hold |
|  TV / Radio |  TV/Radio / |
|  Subtitle |  Subtitle / EQ |
|  Reveal |  Setup / OPT / |
|  Size |  Zoom / Size |

| Original | Sustituto |
|--|--|
|  Hold |  Shift + Stop / |
|  Text |  Text / Goto |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

