


 


 
 

 
 

 

 


 

 



 
 

 
 

 




 





 
 



 





 
 
 
 

 


 













Original	Sustituto
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Sustituto
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Mute	 Mute
 TXT	 Text
 Aspect	 Format
 Nicam	 Shift + 3D
 Display	 Info
 Sleep	 Sleep
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -





Original	Sustituto
	 Ok
	 AV
	 Menu
	 Stop
	 Play
	 Pause
	 TV/R
	 D. Menu
	 Shift + Subt
	 Media
	 3D
	 Smart
	 Guide
	 Shift + Up
	 Pre Ch
	 List
	 I<<

Original	Sustituto
	 Shift + Down
	 >>I
	 Shift + Right
	 Shift + Left
	 <<
	 >>
	 Options
	 Dual
	 Shift + Info
	 Shift + Eject
	 Subt
	 Shift + Ok

