



 
 
 






 
 
 













Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV/ZAPP	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Sustituto
 Exit/TV-G	 Exit
 ?	 Smart
 @	 Media
 Menu/i	 Menu
 Back	 Back
 Tools	 Options
 Guide	 Guide
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 AV	 AV





Original	Sustituto	Original	Sustituto
 Mute	 Mute		
 I<	 I<<		
 >I	 >>I		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 3D/Search	 Format		
 ..O/Audio	 Dual		
 [...]..	 Subt		
 PIP/ECO	 3D		
 My Media/CEC	 TV/R		

