



 







 










 


 














Original	Sustituto	Original	Sustituto
 Power	 Power	 1	 1
 2	 1	 3	 2
 4	 3	 5	 4
 6	 5	 7	 6
 8	 7	 9	 8
 0/AV	 9	 0/AV	 0
 0/AV	 0	 Up	 Up
 P+	 CH+ / Page+	 Right	 Right
 Vol+	 Vol+	 Left	 Left

Original	Sustituto	Original	Sustituto
 Vol-	 Vol-	 OK	 OK
 Down	 Down	 P-	 CH- / Page-
 P-	 Info / Angle	 Format / Picture	 Picture / Format
 TXT	 Text / Goto	 Mute	 Mute / Dimmer
 Red/AKT	 Red / Netflix / Search	 Green/Timer	 Sleep / Timer
 Green/Timer	 Green / APP / Repeat	 Yellow / [ I ]	 Yellow / YouTube / Repeat
 Blue/[++]	 Blue / Prime Video / Random	 -O	 << / Tune-
 O+	 >> / Tune+	 -*	 I<< / Preset-
 *+	 >>I / Preset+		





Original		Sustituto		Original		Sustituto	
	PIP		Setup / OPT /				
	IDTV-?		Smart / List				
	P/C-ATS		Display / Media				
	AUX	 + 	Shift + 7				










 










 


 



Original	Sustituto	Original	Sustituto
	Power		Power
	P+		CH+ / Page+
	P-		CH- / Page-
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		Left
	>		Right
	<<		<< / Tune-
	>>		>> / Tune+














Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		AV / Input / RDS
	0/AV		0
	P+		CH+ / Page+
	Up		Up
	Right		Right
	Vol+		Vol+
	Left		Left

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	OK		OK
	P-		CH- / Page-
	Down		Down
	i		Info / Angle
	Format / Picture		Picture / Format
	TXT		Text / Goto
	Mute		Mute / Dimmer
	Red/AKT		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Green/Timer		Sleep / Timer
	Yellow/[ I ]		Yellow / YouTube / Repeat
	Blue/[ ++ ]		Blue / Prime Video / Random
	-O		<< / Tune-
	O+		>> / Tune+
	-*		I<< / Preset-
	*+		>>I / Preset+





Original		Sustituto		Original		Sustituto	
	PIP		Setup / OPT /				
	IDTV-?		Smart / List				
	P/C-ATS		Display / Media				
	AUX	 + 	Shift + 7				

