









 



 

 

 

 


 
 



 
 




Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Sustituto
 Guide	 Guide
 ?	 Dual
 Exit	 Exit
 Menu	 Menu
 Tools	 Options
 Back	 Back
 @	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV
 P+	 Ch +





	Original	Sustituto	Original	Sustituto
	P-			Ch -
	I<			I<<
	>I			>>I
	<<			<<
	>>			>>
	Rec			Rec
	Play			Play
	Pause			Pause
	Stop			Stop
	3D			3D
	OQ			Format
	[...]..			Subt
	Netflix	 + 		Shift + Media
	My Media			Media

