



 





 



 

 
 
 
 


 
 


 

 
 
 
 
 
 

 


Original	Sustituto	Original	Sustituto
 Power	 Power	 Green/Slow	 Green
 I<<	 I<<	 Yellow/Repeat	 Yellow
 Eject	 Eject	 Blue/A-B	 Blue
 <<	 <<	 CH+	 Ch +
 >>	 >>	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 Play	 Play	 TV/AV	 AV
 Pause	 Pause	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 TV/TXT/Langua	 Text	 DTV	 Shift + Smart
 Cancel/Zoom	 Shift + Eject	 DVD Setup	 D. Menu
 Reveal/Subtitle	 3D	 Exit	 Exit
 Hold/Menu	 Smart	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left





Original	Sustituto
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Recall	 Back
 Picture	 +  Shift + Format
 Sound	 +  Shift + Dual
 Nicam/A2	 Dual
 Mute	 Mute

Original	Sustituto
 Sleep	 Sleep
 Info	 Info
 Subtitle	 Subt
 Channel List	 List
 EPG	 Guide
 Tv/Radio	 TV/R
 FAV	 Pre Ch

