



 







































 





















 





| Original   | Sustituto   | Original  | Sustituto  |
|--|---|---|--|
|  Power    |  Power                       |  V -       |  Vol-                   |
|  Mute     |  Mute / Dimmer               |  Home      |  Shift + Menu /         |
|  1        |  1                           |  CH -      |  CH- / Page-            |
|  2        |  2                           |  Menu      |  Menu / Home            |
|  3        |  3                           |  Up        |  Up                     |
|  4        |  4                           |  Source    |  AV / Input / RDS       |
|  5        |  5                           |  Left      |  Left                   |
|  6        |  6                           |  Enter     |  OK                     |
|  7        |  7                           |  Right     |  Right                  |
|  8        |  8                           |  Exit      |  Exit / Cancel / Clear  |
|  9       |  9                          |  Down     |  Down                  |
|  List   |  Smart / List              |  Display |  Display / Media      |
|  0      |  0                         |  P.Mode  |  Picture / Format     |
|  Recall |  Back / Return             |  S.Mode  |  Sound / Title        |
|  V +    |  Vol+                      |  Sleep   |  Sleep / Timer        |
|  Aspect |  Shift + Picture / Format |  MTS     |  Shift + Smart / List |
|  CH +   |  CH+ / Page+               |  Rec     |  Rec / Rec Mode       |





| Original   | Sustituto   | Original   | Sustituto   |
|--|---|--|---|
|  Guide          |  Guide / EPG / -/--          |  CAP            |  Shift + Display / Media |
|  Red            |  Red / Netflix / Search      |  Subtitle       |  Subtitle / EQ           |
|  Green          |  Green / APP / Repeat        |  TV / Radio     |  TV/Radio /              |
|  Yellow         |  Yellow / YouTube / Repeat   |  FAV            |  Fav / Marker / PC       |
|  Blue           |  Blue / Prime Video / Random |  Size / Mouse   |  Zoom / Size             |
|  << / Index     |  << / Tune-                  |  Hold / Refresh |  Stop / Hold             |
|  << / Index     |  Shift + << /                |  |   |
|  Play/Pause /   |  Shift + Play /              |  |   |
|  Play/Pause /   |  Pause / Step / Freeze       |  |   |
|  Play/Pause /   |  Play / Slow                 |  |   |
|  >> / TTX      |  >> / Tune+                 |  |   |
|  >> / TTX     |  Shift + >> /              |  |   |
|  I<< / Sub.Pg |  Shift + I<< / Preset-     |  |   |
|  I<< / Sub.Pg |  I<< / Preset-             |  |   |
|  >>I / Reveal |  >>I / Preset+             |  |   |
|  Stop / Mix   |  Shift + Rec / Rec Mode    |  |   |
|  Stop / Mix   |  Shift + Stop /            |  |   |

Hold

