







 
 
 
 
 


 











 









 


 


 

 

 







 



 








Original	Sustituto
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Nicam	 Smart

Original	Sustituto
 Auto	 Media
 Display	 Info
 CH+	 Ch +
 CH-	 Ch -
 LCD Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Aspect	 3D
 FAV	 Pre Ch





Original	Sustituto
 FAV-	 +  Shift + Ch -
 FAV+	 +  Shift + Ch +
 TEXT	 TEXT
 Hold	 OPT Options
 Lang	 DUAL Dual
 EPG	 GUIDE Guide
 Index	 LIST List
 Size	 FORMAT Format
 Reveal	 SUBT Subt
 Subpage	 TV/R
 Red/Tv/Radio	 A Red
 Green/Audio	 B Green
 Yellow/Freeze	 C Yellow
 Blue/Subtitle	 D Blue

Original	Sustituto

