



Original	Sustituto
Power On	Power
Power Off	Shift + Power
Mute	Mute / Dimmer
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
Vid 1 / VCR	Shift + 1
Vid 2 / CBL/Sat	Shift + 4
Vid 3 / TV	Shift + 7
DIM	Shift + Mute / Dimmer
AM/FM	TV/Radio /
6 CH	Shift + 6
PR + / Sleep	CH+ / Page+
Test	Text / Goto
Vol +	Vol+
PR - / Surr.	CH- / Page-
Vol -	Vol-

Original	Sustituto
CH / [=?]	Smart / List
Up	Up
Spkr. / Menu	Menu / Home
Left	Left
Set	Setup / OPT /
Right	Right
Digital / [=X]	D.Menu / Top
Down	Down
Delay / Prev. CH	Back / Return
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8





Original	Sustituto
Tun-M	+ Shift + TV/Radio / Program
9	9
0	0
Mem	Display / Media
Red / Tuning +	Red / Netflix / Search
Tuning +	+ Shift + CH+ /
Green / Direct	Green / APP / Repeat
Yellow / Clear	Yellow / YouTube / Repeat
Yellow / Clear	+ Shift + Yellow / YouTube /
Blue / Preset +	Blue / Prime Video / Random
Preset +	>>I / Preset+
Tuning -	+ Shift + CH- /
Tone	Sound / Title
RDS	AV / Input / RDS
Preset -	I<< / Preset-
Dolby Sur	+ Shift + Audio / Lang I/II
DTS Sur	+ Shift + D.Menu / Top Menu

Original	Sustituto
DTS Neo 6	+ Shift + 9
Night	Sleep / Timer
Logic 7	Picture / Format
Stereo	Audio / Lang I/II
Skip DWN	+ Shift + Down
Skip UP	+ Shift + Up
<<	<< / Tune-
Play / Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze

