



 
 

 
 
 

 

 

 
 




 





 















 



 

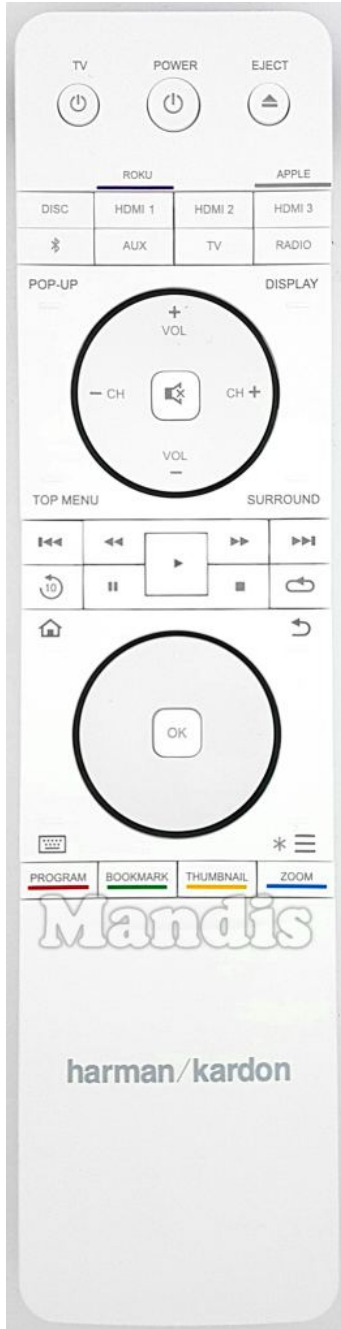 



 












 
 


 



 


 
 
 


Original	Sustituto
 Power	 Power
 Eject	 Eject
 Disc	 1
 HDMI1/Roku	 2
 HDMI2	 3
 HDMI3/Aple	 4
 Bluetooth	 5
 AUX	 6
 TV	 7
 Radio	 TV/R
 Pop Up	 D. Menu
 Display	 Info
 Top Menu	 Menu
 Surround	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

 
Original	Sustituto
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Recall	 Pre Ch
 (10)	 Media
 [::]	 Guide
 Home	 Smart
 *≡	 Options
 Back	 Back
 Up	 Up
 Down	 Down





	Original	Sustituto	Original	Sustituto
	Power	 Power		
	Pop Up	 D. Menu		
	Play	 Play		
	>>	 >>		
	<<	 <<		
	Pause	 Pause		
	Stop	 Stop		
	OK	 Ok		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		



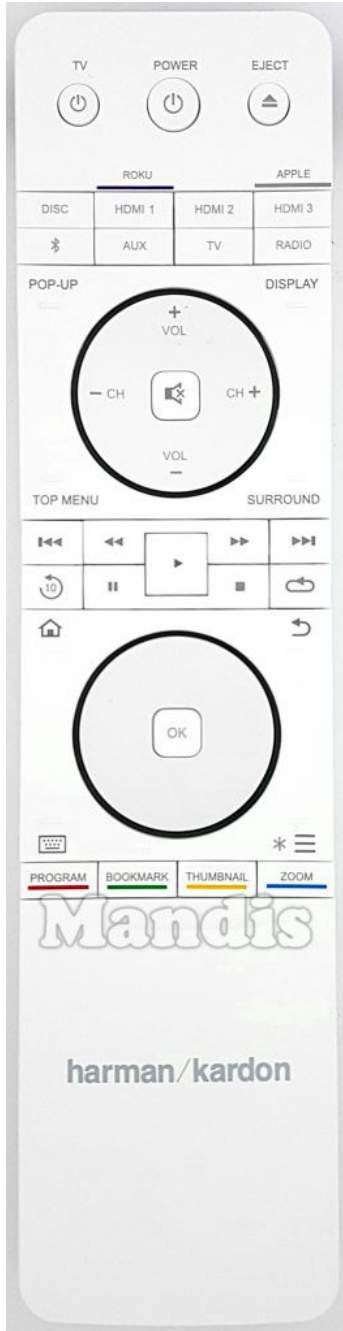

Original	Sustituto
Power Tv	Power
Eject	Eject
Pop Up	D. Menu
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Recall	Back
Up	Up
OK	Ok
Down	Down
Right	Right
Left	Left
Red/Program	Red
Green/Bookmar	Green
Yellow/Thumbnail	Yellow
Blue/Zoom	Blue
CH+	Ch +

Original	Sustituto
CH-	Ch -

