



Original	Sustituto
On	Power
Off	Shift + Power
Mute	Mute / Dimmer
AVR	Shift + Smart / List
DVD	Shift + 2
VID1	Shift + 1
HDMI1	Shift + Guide / EPG / -/-
AM/FM	Shift + 6
CD	Shift + 3
VID2	Shift + 4
HDMI2	Shift + 0
AUX	Shift + 7
Tape	Shift + 5
VID3	Shift + 8
HDMI3	Shift + Fav / Marker / PC
Sleep	Sleep / Timer
6CH	Shift + 9

Original	Sustituto
Vol+	Vol+
Surr.	Eject / Surround
Test	Text / Goto
Vol-	Vol-
CH.	Guide / EPG / -/-
Up	Up
SPKR	Menu / Home
Left	Left
OK	OK
Right	Right
Digital	Picture / Format
Down	Down
Delay	Fav / Marker / PC
1	1
2	2
3	3
4	4

















 

 











 




Original	Sustituto
	5
	6
	7
	8
	Smart / List
	9
	0
	Info / Angle
	>> / Tune+
	Back / Return
	Exit / Cancel / Clear
	>>I / Preset+
	<< / Tune-
	Setup / OPT /
	AV / Input / RDS
	I<< / Preset-
	Red / Netflix / Search

Original	Sustituto
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	+ Shift + Sleep / Timer
	+ Shift + Blue / Prime
	Blue / Prime Video / Random
	D.Menu / Top





Original	Sustituto
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Disc Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Status	 Display / Media
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Playlist	 Smart / List
 I<</Skip Down	 I<< / Preset-
 Skip Up/>>I	 >>I / Preset+
 << DVD	 << / Tune-
 > DVD	 Play / Slow
 >> DVD	 >> / Tune+
 Open / Close	 Eject / Surround
 Stop DVD	 Stop / Hold

Original	Sustituto
 Pause DVD	 Pause / Step / Freeze

