




 
 

Original	Sustituto
On	Power
Off	+  Shift + Power
Mute	Mute
AVR	+  Shift + 1
DVD	+  Shift + 2
CD	+  Shift + 3
Tape	+  Shift + 4
VID1/VCR	+  Shift + 5
VID2/TV	+  Shift + 6
VID3/CBL/SAT	+  Shift + 7
DIM	+  Shift + 8
AM/FM	+  Shift + 9
6 CH	+  Shift + Guide
Sleep	Sleep
Test	Smart
Input	AV
Vol+	Vol +

Original	Sustituto
Surr.	Dual
Night	Exit
[≡]	Text
Vol-	Vol -
CH./[≡?]	TV/R
Up	Up
SPKR/Menu	Menu
Left	Left
Set	Ok
Right	Right
Digital/[≡X]	Media
Down	Down
Delay/Normal	Info
1	1
2	2
3	3
4	4








 
 
 

 

 
 
 
 

 




 

 

 


 









 


 

 

 

 
 
 

 

 

 

 



 

 





Original	Sustituto
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[ $\equiv$ +]	 Guide
 9	 9
 0	 0
 Mem/[ $\equiv$ ♦]	 Pre Ch
 Tuning ▲ / Red	 Ch +
 Tuning ▲ / Red	 Red
 Direct/Green	 Green
 Clear/Yellow	 Yellow
 Preset ▲ / Blue	 Shift + Ch +
 Preset ▲ / Blue	 Blue
 Tuning ▼	 Ch -
 RDS/D.Skip	 Options
 Preset ▼	 Shift + Ch -

Original	Sustituto
 Dolby	 Shift + Red
 DTS Surr.	 Shift + Green
 DTS Neo 6	 Shift + Yellow
 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue
 Skip Dwn DVD	 I<<
 Skip Up DVD	 >>I
 << DVD	 <<
 Play DVD	 Play
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause





Original	Sustituto
 Power On	 Power
 Power Off	 Shift + Power
 Vol+	 Vol +
 Night	 Exit
 [=]	 Text
 Vol-	 Vol -
 CH./[=?]	 TV/R
 Up	 Up
 SPKR/Menu	 Menu
 Left	 Left
 Set	 Ok
 Right	 Right
 Digital/[=X]	 Media
 Down	 Down
 Delay/Normal	 Info
 1	 1
 2	 2

Original	Sustituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Tun-M/[=+]	 Guide
 9	 9
 0	 0
 Mem/[=◇]	 Pre Ch
 Direct	 Smart
 Clear	 Shift + Exit
 Preset ▲	 Ch +
 RDS/D.Skip	 Options
 Preset ▼	 Ch -
 I<<	 I<<
 >>I	 >>I







