



Original	Sustituto
On	Power
Off	+  Shift + Power
Mute	Mute / Dimmer
AVR	Fav / Marker / PC
DVD	+  Shift + 2
CD	+  Shift + 3
Tape	+  Shift + 5
VID1/VCR	Guide / EPG / -/--
VID2/TV	+  Shift + 1
VID3/CBL/SAT	+  Shift + 0
VID4	+  Shift + Guide / EPG / -/--
AM/FM	+  Shift + 6
6/8 CH	Picture / Format
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Sustituto
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5





Original	Sustituto
6	6
7	7
8	8
Tun-M/[≡+]	Green / APP / Repeat
9	9
0	0
Mem/[≡◆]	Rec / Rec Mode
Tuning ▲	>> / Tune+
Direct	TV/Radio /
Clear	Exit / Cancel / Clear
Preset ▲	>>I / Preset+
Tuning ▼	<< / Tune-
OSD	Display / Media
RDS	AV / Input / RDS
Preset ▼	I<< / Preset-
Dolby	Sound / Title
DTS Surr.	Smart / List

Original	Sustituto
DTS Neo 6	Subtitle / EQ
Logic 7	Blue / Prime Video / Random
Stereo	Audio / Lang I/II
I<</Skip Down	Shift + I<< / Preset-
Skip Up/>>I	Shift + >>I / Preset+
<< DVD	Shift + << /
Play DVD	Play / Slow
>> DVD	Shift + >> /
Stop DVD	Stop / Hold
Pause DVD	Pause / Step / Freeze







Original	Sustituto
Power On	Power
Power Off	Shift + Power
Vol+	Vol+
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2

Original	Sustituto
3	3
4	4
5	5
6	6
7	7
8	8
Tun-M/[≡+]	Green / APP / Repeat
9	9
0	0
Mem/[≡◇]	Rec / Rec Mode
Direct	TV/Radio /
Clear	Exit / Cancel / Clear
Preset ▲	Shift + Preset+
RDS/D.Skip	AV / Input / RDS
Preset ▼	Shift + Preset-
I<<	I<< / Preset-
>>I	>>I / Preset+









Original	Sustituto
 Power On	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mem/[≡ ♦]	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Direct	 TV/Radio /
 Delay/Normal	 Setup / OPT /
 RDS/D.Skip	 AV / Input / RDS
 SPKR/Menu	 Menu / Home
 Power (On/Off)	 OK
 Clear VCR	 Exit / Cancel / Clear
 Vol+ VCR	 Vol+
 PR+ VCR	 CH+ / Page+

Original	Sustituto
Vol- VCR	 Vol-
PR- VCR	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡ +]	 Green / APP / Repeat
 Preset ▲/Blue	 Blue / Prime Video / Random
 Power Off	 Shift + Power
 Play VCR	 Shift + Play /
 Stop VCR	 Shift + Stop /

Hold









Original		Sustituto	
	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original		Sustituto	

