



























 




 




























 





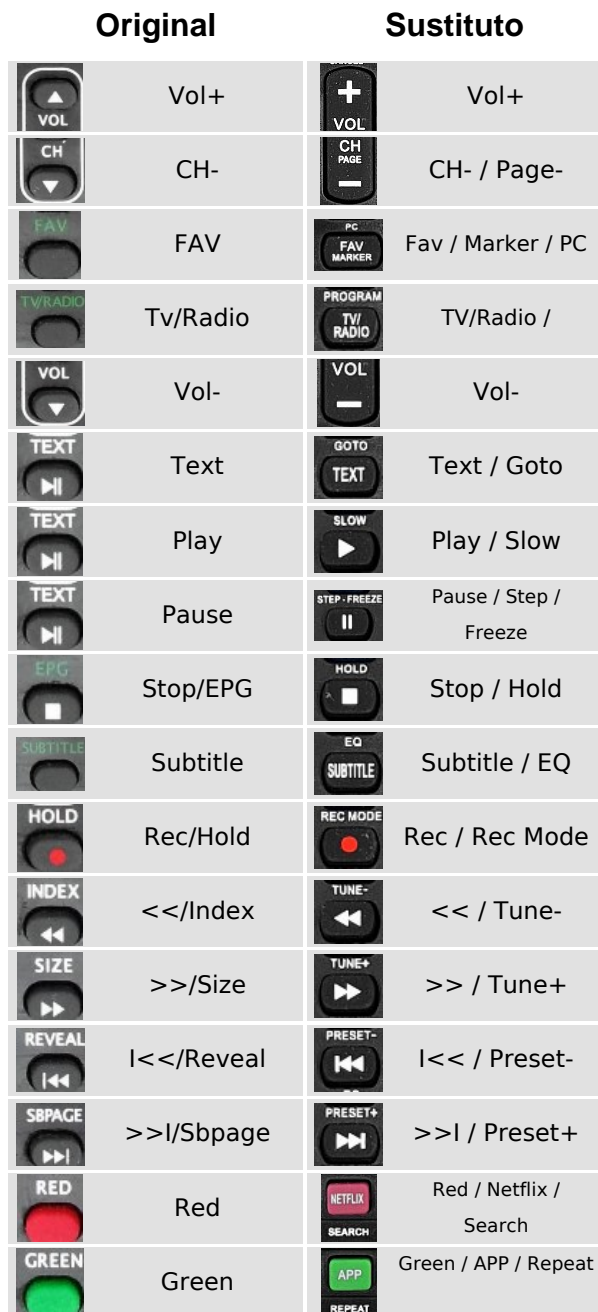




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Sleep	 Sleep / Timer
 Aspect	 Zoom / Size
 USB/CR	 Shift + 8
 Display	 Display / Media
 Auto	 Smart / List
 PMode	 Picture / Format
 SMode	 Sound / Title
 DTV	 D.Menu / Top
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down

Original	Sustituto
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Back	 Back / Return
 CH+	 CH+ / Page+
 Info	 Info / Angle
 Audio	 Audio / Lang I/II





Power

DIMMER MUTE

SHIFT

TV DVD SAT AUX

SLOW STEP - FREEZE HOLD REC MODE

Play Pause Stop

TUNE- TUNE+ PRESET- PRESET+

Left Arrow Right Arrow

LANG UI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

OK

UP Arrow DOWN Arrow LEFT Arrow RIGHT Arrow

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ VOL -

SMART MEDIA DISPLAY

+ CH PAGE -

TV DVD CD - STB

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX - HDD USB BLUETOOTH

7 8 9

PC

GUIDE FAV

EPG MARKER

Netflix App YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv