


 




Original	Sustituto
 Standby	 Power
 P.STD	 Shift + Format
 10+	 Pre Ch
 Open / Close	 Eject
 Scan	 Smart
 Swap	 Back
 Call	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 -/--	 Shift + Guide
 Source	 AV
 Nicam	 List
 DTV / DVD	 TV/R
 P +	 Ch +
 P -	 Ch -
 V +	 Vol +
 V -	 Vol -
 Menu	 Menu
 Zoom	 Shift + Eject
 Audio	 Dual
 Stop	 Stop
 Setup	 Options
 Pause / Step	 Pause
 Tune	 Shift + List
 << Rev	 <<





Original	Sustituto	Original	Sustituto
 >> Fwd	 >>	 Slow	 Shift + Play
 I<< Prev	 I<<	 D.Call	 Shift + Sleep
 >>I Next	 >>I	 Repeat	 Shift + Text
 D. Menu	 D. Menu	 Subcode	 Shift + Subt
 Exit	 Exit	 Mix	 Media
 EPG / Program	 Guide	 Text	 Text
 Up	 Up	 Hold	 Shift + Pause
 Down	 Down	 Reveal	 3D
 Right	 Right	 Size	 Format
 Left	 Left	 Time	 Shift + AV
 OK / Play / Enter	 Ok	 Mode	 Shift + 3D
 OK / Play / Enter	 Play	 Red	 Red
 Subtitle	 Subt	 Green / DTV /	 Green
 FAV / Angle	 Shift + Pre Ch	 Yellow / Lang	 Yellow
 i / Title / PBC	 Info	 Blue / Timer	 Blue
 Search	 Shift + TV/R		
 A - B	 Shift + Red		

