 




 

 




 

 





 
 

 
 



 
 






 







 

 

 

 

 




 

 
 
 

 







Original	Sustituto
	 Power
	 Ok
	 Up
	 Down
	 Right
	 Left
	 Vol +
	 Vol -
	 Ch +
	 Ch -
	 Exit
	 Back
	 Red
	 Green
	 Yellow
	 Blue
	 Info

Original	Sustituto
	 Menu
	 Mute
	 AV
	 Pre Ch
	 0
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide
	 Text
	 Shift + Pre Ch





Original		Sustituto	
SLEEP	Sleep	PROG SLEEP	Sleep
SUBTITLE	Subtitle	AD SUBT	Subt
LANG	Lang	SOUND DUAL	Dual
SCREEN	Screen	PICTURE FORMAT	Format
PRESETS	Presets	ZOOM	Eject
INTERNET	Internet	HOME SMART	Smart
MULTIMEDIA	Multimedia	APP MEDIA	Media
PLAY	Play	PLAY MODE	Play
MY BUTTON 1	My Button1	DISC NAV LIST	List
MY BUTTON 2	My Button2	E-MANUAL D.MENU	D. Menu
REC	Rec	REC MODE	Rec
PAUSE	Pause	PAUSE	Pause
STOP	Stop	STOP	Stop
SKIP FWD	>>	SKIP FWD	>>
SKIP REV	<<	SKIP REV	<<
SKIP FWD L	>>	SKIP FWD L	>>
SKIP REV L	<<	SKIP REV L	<<

Original	Sustituto

