





 
 
 


 

 





Original	Sustituto
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Original	Sustituto
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow





 



 







Original	Sustituto
Yellow / Subtitle	Subt
TV / AV	AV
Green / P/N	Green
SAT	Media
TV / Radio	TV/R
EPG	Guide

Original	Sustituto



 
 



 
 


 
 

 


Original	Sustituto
 Power	 Power
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 TV/SAT	 AV
 TV/Radio	 TV/R
 Zoom	 Eject
 List	 List
 Audio	 Dual
 EPG	 Guide
 Timer	 Shift + AV
 Text	 Text
 Exit	 Exit
 Menu	 Menu
 M/P	 Media
 Mute	 Mute

Original	Sustituto
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 P+
 P-	 P-
 Recall	 Pre Ch
 FAV	 Shift + Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4





Original		Sustituto		Original		Sustituto	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Info		Info				
	Pause		Pause				

