

 

 

 

 



 























 



 









 





 

















Original	Sustituto	Original	Sustituto
 Power	 Power	 CH.List	 CH.List
 Info	 Info / Angle	 [=]	 Smart / List
 Input	 AV / Input / RDS	 Up	 D.Menu / Top
 [++]	 Setup / OPT /	 Up	 Up
 [1]	 Picture / Format	 Colors	 Fav / Marker / PC
 [2]	 Zoom / Size	 Left	 Left
 1	 1	 OK	 OK
 2	 2	 Right	 Right
 3	 3	 Back	 Back / Return
 4	 4	 Down	 Down
 5	 5	 Play	 Play / Slow
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Vol+	 Vol+
 8	 8	 Home	 Menu / Home
 9	 9	 CH+ / Page+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-
 0	 0	 Mute	 Mute / Dimmer
		 CH-	 CH- / Page-



