





 


 

 
 


 








 

 

 




 




Original	Sustituto	Original	Sustituto
	Power		Power
	[i+]		Info
	TV/DTT		Smart
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[> <]		Format
	White		Pre Ch
	I/II/[≡i]		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text
	[≡+]/Status		3D
	[...]		Subt
	[≡?]/Skip		Options
	Menu		Menu
	Guide		Guide
	Nothing 3		Shift + 3
	Exit		Exit





	Original	Sustituto	Original	Sustituto
	Power			
	P+			
	P-			
	Up			
	Down			
	Right			
	Left			
	Enter			
	Menu			
	Pause			
	Play			
	Stop			
	<<			
	>>			
	I<<			
	>>I			



