



Original	Sustituto
	 Power
	 Green
	 Yellow
	 Red
	 Format
	 Smart
	 TV/R
	 Media
	 Eject
	 AV
	 Pause
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 D. Menu
	 1

Original	Sustituto
	 2
	 Mute
	 Info
	 Menu
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Exit
	 Back

