







 





 



 

















Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Up	 CH+ / Page+
 Down	 Down
 Down	 CH- / Page-

Original	Sustituto
 Vol+ / Right	 Right
 Vol+ / Right	 Vol+
 Vol- / Left	 Left
 Vol- / Left	 Vol-
 Menu	 Menu / Home
 ◊	 Smart / List
 AV	 AV / Input / RDS
 TV	 TV/Radio /
 Text	 Text / Goto
 Red / F	 Red / Netflix / Search
 Green / →←	 Green / APP / Repeat
 Yellow / Recall	 Yellow / YouTube / Repeat
 Yellow / Recall	 Back / Return
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer

