









 





























 










 

 




| Original | Sustituto | Original | Sustituto |
|--|--|---|---|
|  Operate |  Power |  Prog+ |  CH+ / Page+ |
|  Correct |  Back / Return |  Vol+ Tv |  Vol+ |
|  Eject |  Eject / Surround |  Prog+ Tv |  Shift + CH+ / |
|  Enter |  OK |  0 |  0 |
|  Trans AUX |  Setup / OPT / |  Prog- |  CH- / Page- |
|  1 |  1 |  Vol- Tv |  Vol- |
|  2 |  2 |  Prog- Tv |  Shift + CH- / |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Disp |  Display / Media |
|  5 |  5 |  Index |  Smart / List |
|  6 |  6 |  SP/LP |  Picture / Format |
|  VCR/TV |  TV/Radio / |  Count Clock |  Yellow / YouTube / Repeat |
|  Power Tv |  Shift + Power |  0000 |  Exit / Cancel / Clear |
|  Mute Tv |  Mute / Dimmer |  I> Slow |  Red / Netflix / Search |
|  7 |  7 |  Rec |  Rec / Rec Mode |
|  8 |  8 |  Up |  Up |
|  9 |  9 |  CH 1/2 |  Green / APP / Repeat |





| | Original | Sustituto | Original | Sustituto |
|--|---------------|-----------------------|----------|-----------------------------|
| | A.Dub | GOTO TEXT | | Text / Goto |
| | V.Dub | RDS AV INPUT | | AV / Input / RDS |
| | -- | GUIDE EPG | | Guide / EPG / -/-- |
| | Down | | | Down |
| | Tracking Up | | | Right |
| | Tracking Down | | | Left |
| | Play | SLOW | | Play / Slow |
| | << | TUNE- | | << / Tune- |
| | >> | TUNE+ | | >> / Tune+ |
| | Stop | HOLD | | Stop / Hold |
| | Pause | STEP-FREEZE | | Pause / Step / Freeze |
| | II> | Prime Video RANDOM | | Blue / Prime Video / Random |
| | REV | PRESET- | | I<< / Preset- |
| | FWD | PRESET+ | | >>I / Preset+ |
| | | | | |
| | | | | |
| | | | | |
| | | | | |





| Original | Sustituto | Original | Sustituto |
|---|---|---|---|
|  Operate |  Power |  Prog- |  CH- / Page- |
|  Correct |  Back / Return |  Menu |  Menu / Home |
|  Eject |  Eject / Surround |  Disp |  Display / Media |
|  Enter |  OK |  Index |  Smart / List |
|  Trans AUX |  Setup / OPT / |  SP/LP |  Picture / Format |
|  1 |  1 |  Count Clock |  Yellow / YouTube / Repeat |
|  2 |  2 |  0 |  0 |
|  3 |  3 |  I> Slow |  Red / Netflix / Search |
|  4 |  4 |  Rec |  Rec / Rec Mode |
|  5 |  5 |  Up |  Up |
|  6 |  6 |  CH 1/2 |  Green / APP / Repeat |
|  VCR/TV |  TV/Radio / |  A.Dub |  Text / Goto |
|  7 |  7 |  V.Dub |  AV / Input / RDS |
|  8 |  8 |  -- |  Guide / EPG / -/- |
|  9 |  9 |  Down |  Down |
|  Prog+ |  CH+ / Page+ |  Tracking Up |  Right |
|  0000 |  Exit / Cancel / Clear |  Tracking Down |  Left |



