


 




 
 





 

 







Original	Sustituto
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Original	Sustituto
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original	Sustituto	Original	Sustituto
[≡o]	TIMER SLEEP Sleep / Timer		
Hold	HOLD Stop / Hold		
[≡X]	CLEAR EXIT CANCEL Exit / Cancel / Clear		
Mix / PIP Swap	LIST SMART Smart / List		
PIP / Size	SIZE ZOOM Zoom / Size		
PIP Down / [≡?]	PRESET- I<< / Preset-		
PIP Up / Index	PRESET+ >>I / Preset+		
[TV]	PROGRAM TV/RADIO TV/Radio /		
[AV]	RDS AV INPUT AV / Input / RDS		

