



 


 



 
 
 

 

 
 
 


 
 
Original	Sustituto
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
--/--	SHIFT + GUIDE Shift + Guide
Recall	RETURN BACK Back
Vol+	+ VOL Vol +
Vol-	VOL - Vol -
Nicam	HOME SMART Smart

Original	Sustituto
Auto	APP MEDIA Media
Display	SHIFT + DISPLAY INFO Shift + Info
CH+ Ch +	+ CH Ch +
CH- Ch -	CH - Ch -
Up	Up
Right	Right
Down	Down
Left	Left
Enter	OK Ok
LCD Menu	TOP MENU MENU Menu
DVB Menu	E-MANUAL D.MENU D. Menu
Input	TIMER AV AV
P.Mode	PICTURE FORMAT Format
S.Mode	SHIFT + SETTINGS OPT Shift + Options
Sleep	PROG SLEEP Sleep
Info	DISPLAY INFO Info
FAV	FAV PRE-CH Pre Ch





Original	Sustituto
 FAV+	 Shift + Ch +
 FAV-	 Shift + Ch -
 Text	 Text
 Hold	 Stop
 Lang	 Dual
 EPG	 Guide
 Index	 Options
 Size	 Eject
 Reveal	 3D
 Subpage	 Shift + Subt
 Red / Tv/Radio	 Red
 Red / Tv/Radio	 TV/R
 Green / Audio	 Green
 Green / Audio	 Shift + Dual
 Yellow / Freeze	 Yellow
 Yellow / Freeze	 Pause
 Blue / Subtitle	 Blue

Original	Sustituto
 Blue / Subtitle	 Subt

