



Original	Sustituto
	Power
	+ Shift + Menu
	AV
	Dual
	Subt
	Info
	D. Menu
	TV/R
	Eject
	+ Shift + AV
	Back
	Options
	Guide
	Up
	Down
	Right
	Left

Original	Sustituto
	Red
	+ Shift + Format
	Green
	+ Shift + Dual
	Yellow
	Menu
	Blue
	Ok
	+ Shift + Subt
	Text
	Ch -
	Ch +
	Vol -
	Vol +
	1
	2
	3





	Original	Sustituto		Original	Sustituto
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Mute		Mute		
	P < P		Pre Ch		
	Format		Format		
	Freeze		Pause		
	Smart Controls Picture		Smart		
	Smart Controls Audio		Media		





Original	Sustituto	Original	Sustituto
	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P+		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

