









Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+	Vol+
Vol-	Vol-
Left	Left
Right	Right
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Sustituto
Stop	Stop / Hold
Play/Pause	Play / Slow
Play/Pause	Pause / Step / Freeze
I>/Resume	Shift + Play /
Surround	Eject / Surround
Sound	Sound / Title
Night	Shift + Sleep / Timer
Mute	Mute / Dimmer
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Sleep	Sleep / Timer
DIM	Shift + Mute / Dimmer
Subw +	Up
Rear +	Shift + CH+ /
Center +	CH+ / Page+
Tv Vol+	Shift + Vol+
Subw -	Down





Original	Sustituto
 Rear -	 Shift + CH- /
 Center -	 CH- / Page-
 Tv Vol-	 Shift + Vol-

Original	Sustituto









 







 



 

 

 

 









Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Sustituto
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /





Original	Sustituto	Original	Sustituto
 Standby	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Up	 Up		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Down	 Down		





Original	Sustituto	Original	Sustituto
Standby	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		

