





 
 
 
 
 
 
 

 
 
 

 
 
 
 
 
 
 

 
 


Original	Sustituto
 Standby	 Power
 Source	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 P Mode	 Format
 S Mode	 Dual
 Freeze	 Smart
 TXT	 Text
 Mix / Fav List	 Pre Ch
 Size / Subtitle	 Subt
 Cancel / Audio	 Shift + Dual
 Record	 Rec
 << / Index	 <<
 >> / Hold	 >>
 I<< / Reveal	 I<<

Original	Sustituto
 >>I / Subpage	 >>I
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Stop / EPG	 Stop
 Stop / EPG	 Guide
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 TV / Radio	 TV/R
 CH +	 Ch +





Original		Sustituto		Original	Sustituto
	CH -		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Display		Info		
	Recall		Back		

