 



 



 

 

 

 






 






 

 







Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 R	 Back / Return
 (≡i)	 >> / Tune+
 (◆)	 I<< / Preset-
 (≡o)	 << / Tune-

Original	Sustituto
 (≡?)	 Play / Slow
 Freeze	 Pause / Step / Freeze
 Aspect	 Shift + Picture / Format
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Picture	 Picture / Format
 Source	 AV / Input / RDS
 (≡x)	 Rec / Rec Mode
 Hold	 Stop / Hold
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Vol-	 Vol-
 Menu	 Menu / Home
 Right	 Right
 Vol+	 Vol+
 P-	 CH- / Page-





Original	Sustituto
Down	Down
(≡)(-)	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
PIP Source	Shift + 3
PIP Main	Shift + 2
PIP Swap	Shift + 5
PIP Position	Shift + 4
PIP Size	Shift + 6
PIP	Shift + 1

Original	Sustituto

