 
 
 




Original	Sustituto	Original	Sustituto
	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch
			Info
			Exit
			Up
			Down
			Right
			Left
			Ok
			Ch +
			Ch -
			Vol +
			Vol -
			Red
			Green
			Yellow
			Blue
			Subt
			Dual






 



 

 




 


 













Original	Sustituto	Original	Sustituto
 TXT	 Text		
Zoom	 Eject		
Play/Pause	 Play		
Stop	 Stop		
I>/Slow	 Pause		
Rec	 Rec		
<<	 <<		
>>	 >>		
I<<	 I<<		
>>I	 >>I		



 



Original	Sustituto	
On/Off		Power
Mute		Mute
Update		Smart
Subt.List		Subt
Info		Info
Sleep Timer		Sleep
Return TV		TV/R
Text		Text
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +

Original	Sustituto	
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
Red		Red
Green		Green





Original	Sustituto	Original	Sustituto
Yellow	 Yellow		
Blue	 Blue		

