



 



 



 

 







 




 






 



 

 



 



 



 


 










 





Original	Sustituto	Original	Sustituto
 Power	 Power	 Index / Goto	 Shift + Text /
 I<<	 I<< / Preset-	 Red/Program	 Red / Netflix / Search
 Eject	 Eject / Surround	 Red/Program	 TV/Radio /
 <<	 << / Tune-	 Green/Slow	 Green / APP / Repeat
 >>	 >> / Tune+	 Green/Slow	 Shift + Play /
 >>	 >>  / Preset+	 Yellow/Repeat	 Yellow / YouTube / Repeat
 Play/Pause	 Play / Slow	 Yellow/Repeat	 Shift + Green / APP /
 TV/TXT /	 Text / Goto	 Blue/A-B	 Blue / Prime Video / Random
 TV/TXT /	 Audio / Lang I/II	 Blue/A-B	 Shift + Yellow / YouTube /
 Cancel / Zoom	 Shift + Exit / Cancel / Clear	 CH+	 CH+ / Page+
 Cancel / Zoom	 Shift + Zoom /	 TV Menu	 Menu / Home
 Reveal / Subtitle	 Shift + Subtitle / EQ	 Vol+	 Vol+
 Stop	 Stop / Hold	 CH-	 CH- / Page-
 Hold / Menu	 D.Menu / Top	 Source	 AV / Input / RDS
 Hold / Menu	 Shift + Stop /	 Vol-	 Vol-
 Size / Angle	 Shift + Info / Angle	 DTV	 Shift + 1
 Subpage / Title	 Shift + Sound / Title	 DVD Setup	 Setup / OPT /





Original	Sustituto	Original	Sustituto
 Up	 Up	 0	 0
 Left	 Left	 Recall	 Back / Return
 OK	 OK	 Picture	 Picture / Format
 Right	 Right	 Sound	 Sound / Title
 Down	 Down	 I/II	 Shift + Audio / Lang I/II
 Exit	 Exit / Cancel / Clear	 Mute	 Mute / Dimmer
 Display	 Display / Media	 Sleep	 Sleep / Timer
 1	 1	 Info	 Info / Angle
 2	 2	 Zoom	 Zoom / Size
 3	 3	 Freeze	 Pause / Step / Freeze
 4	 4	 EPG	 Guide / EPG / -/--
 5	 5	 FAV List	 Smart / List
 6	 6	 FAV ADD	 Fav / Marker / PC
 7	 7	 FAV >>I	 Shift + Right
 8	 8	 Subtitle	 Subtitle / EQ
 9	 9	 Time	 Shift + Sleep / Timer
 -/--	 Shift + Guide / EPG / -/--	 Quick Start	 Shift + Smart / List

