









 

 

 


 

 
 














 




Original	Sustituto	Original	Sustituto
	Power		Power
	TV / Radio		TV/R
	Mute		Mute
	i		Info
	ALT		Back
	M/A		Smart
	Teletext		Text
	Exit		Exit
	Menu		Menu
	FAV		Pre Ch
	P/L		Media
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
			Vol -
			PG+
			PG-
			1
			2
			3
			4
			5
			6
			7
			8
			9
			0

