



 







 
 







 








Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	VOD		Smart
	IP		Shift + Smart
	USB		Media
	TXT		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back
	EPG		Guide
	Vol+		Vol +
	Vol-		Vol -
	APPS		Shift + Media
	SAT		AV
	P+		Ch +
	P-		Ch -
	Recall		Pre Ch
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Red		Red





Original		Sustituto		Original	Sustituto
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Fav		Shift + Pre Ch		
	Subt		Subt		
	Audio		Dual		
	TV/Ra		TV/R		
	Rec		Rec		
	Find		Shift + TV/R		
	Play/Pause		Play		
	Play/Pause		Pause		
	Stop		Stop		
	I<<		I<<		
	>>I		>>I		
	<<		<<		
	>>		>>		

