

 

 






 


 






 

 

 



 

 






Original	Sustituto
 Standby	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Fav	 Pre Ch
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Sustituto
 TV/Radio	 TV/R
 Display	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Mute	 Mute
 EPG	 Guide
 Home	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH--	 Ch -
 Rec	 Rec





Original	Sustituto
T.Shift	Media
Audio	Dual
Size / Aspect	Format
Text	Text
Hold	Shift + Stop
Reveal	Shift + Pause
Mouse	Options
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Subtitle	Subt
Index / Reclist	List
<<<	<<<
>>>	>>>
I<<< / Subpage	I<<<
>>>I / Mix	>>>I
Red	Red

Original	Sustituto
Green	Green
Yellow	Yellow
Blue	Blue

