


 


 





 

 
 

 





 
 
 

 
 



 



Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Update	 Play	Menu Down	 Down
Reveal	 Pause	Back	 Back
Txt Stop	 Stop	Volume+	 Vol +
Info	 Rec	Chan.Up	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Chan.Down	 Ch -
Menu video	 D. Menu	1	 1
Text	 Text	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Original	Sustituto	Original	Sustituto
9	 9		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone-	 <<		
Tone+	 >>		
Contrast+	 >>		
Contrast-	  <<		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofers	 +  Shift + Blue		

