
 







 


| Original | Sustituto | Original | Sustituto |
|--------------|---|----------|-----------|
| Power ON/Off |  Power | | |
| Mute |  Mute | | |
| Input/Source |  AV | | |
| CD Play |  Play | | |
| CD F.FWD |  >> | | |
| Volume+ |  Vol + | | |
| CD Rewind |  << | | |
| CD Pause |  Pause | | |
| Volume- |  Vol - | | |
| Prev./Prog- |  I<< | | |
| Next/Prog+ |  >>I | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

