 

 






 








Original	Sustituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 +100	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Menu	 Menu

Original	Sustituto
 Up	 Up
 Down	 Down
 Set	 Ok
 <</<</Service	 Left
 >>/>>/Service	 Right
 Cancel	 Shift + Back
 Clock/Timer	 AV
 Display	 Info
 Sleep	 Sleep
 A.P.S.	 Media
 Stop/PTY	 Stop
 Sound Mode	 Dual
 Repeat	 Text
 Rec Speed	 Rec
 Rec Delete	 Back
 Rec Mode	 Shift + Rec
 FM Mode	 TV/R





Original	Sustituto	Original	Sustituto
 Play Mode	 Format		
 Tuner	 Subt		
 Super Woofer	 Ch +		
 Super Woofer Vol-	 Ch -		
 Distorsion Level +	 >>		
 Distorsion Level -	 <<		
 Play/Pause USB	 Red		
 Play/Pause CD	 Play		
 Play/Pause iPod	 Pause		
 Play/Pause Metronome	 Green		
 Play/Pause Bluetooth	 Yellow		
 Audio In	 Blue		

