



Original	Sustituto
TEST	Text
1	1
1	1 FM/AM
2	2
2	2 FM/AM
3	3
3	3 FM/AM
EFFECT	Effect
4	4
4	4 FM/AM
5	5
5	5 FM/AM
6	6
6	6 FM/AM
7/P	7/P
7/P	7 FM/AM
8	8

Original	Sustituto
8	8 FM/AM
9	9
9	9 FM/AM
LEVEL	Level- SURR L
LEVEL	Level - SURR R
LEVEL	Level- Center
LEVEL	Level- SUBWFR
LEVEL	Level- Front L
LEVEL	Level- Front R
LEVEL+	Level+ SURR L
LEVEL+	Level+ SURR R
LEVEL+	Level+ Center
LEVEL+	Level+ SUBWFR
LEVEL+	Level+ Front L
LEVEL+	Level+ Front R
10	10/Return
10	10 FM/AM

 






 




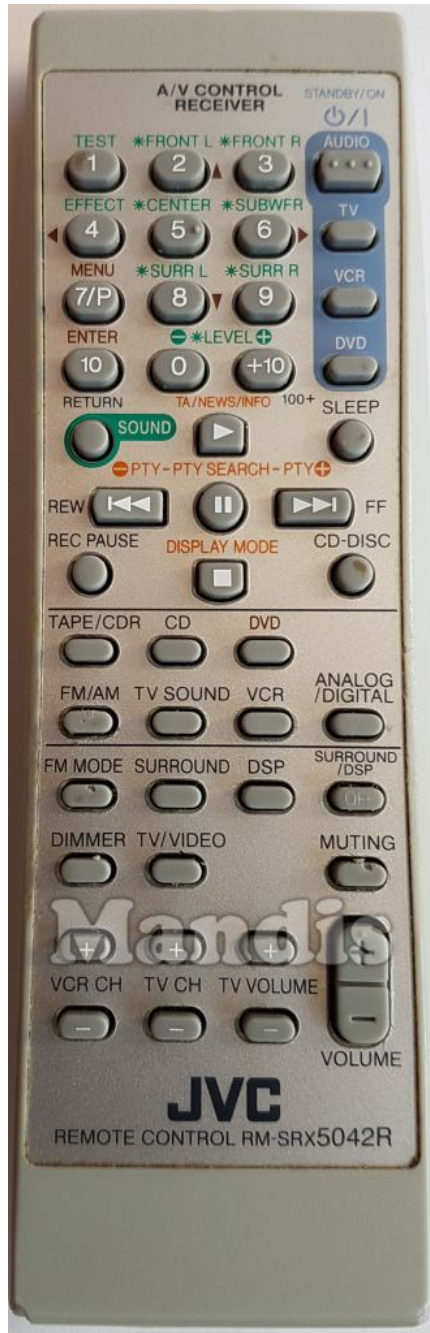








 

 




 










Original	Sustituto
0	0
+10 / +100	Fav / Marker / PC
+10 FM/AM	Shift + 0
Play/TA/News/Info	Shift + Play /
Play FM/AM	Play / Slow
I<</PTY-	Shift + I<< / Preset-
I<<FM/AM	I<< / Preset-
Pause/PTY Search	Shift + Pause / Step / Freeze
Pause FM/AM	Pause / Step / Freeze
>>I/PTY+	Shift + >>I / Preset+
>>I FM/AM	>>I / Preset+
Stop/Display	Shift + Stop /
Stop FM/AM	Stop / Hold
FM/AM	Shift + TV/Radio / Program
FM Mode	TV/Radio /

Original	Sustituto





Original	Sustituto
 Up	 Up
 Left	 Left
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Enter	 OK
 Play/TA/News/Info	 Shift + Play /
 Play VCR	 Play / Slow
 I<</PTY-	 Shift + I<< / Preset-
 I<< VCR	 I<< / Preset-
 Pause/PTY Search	 Shift + Pause / Step /
 Pause VCR	 Pause / Step / Freeze
 >>I/PTY+	 Shift + >>I / Preset+
 >>I VCR	 >>I / Preset+
 Rec Pause VCR	 Rec / Rec Mode
 Stop/Display	 Stop / Hold
 Stop VCR	 Shift + Stop / Hold

Original	Sustituto





Original	Sustituto
Audio Standby	Audio / Lang I/II
1	1
2	2
3	3
TV Standby	Power
4	4
5	5
6	6
VCR Standby	Shift + Power
7/P	7
DVD Standby	Shift + 2
Play/TA/News/Info	Play / Slow
Sleep	Sleep / Timer
I<</PTY-	I<< / Preset-
Pause/PTY Search	Pause / Step / Freeze
>>I/PTY+	>>I / Preset+
Stop/Display	Stop / Hold

Original	Sustituto
FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4
Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS
Surround	Eject / Surround
DSP	Text / Goto
Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+
Vol+	Vol+
VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-





Mode



Original

Sustituto

Original	Sustituto
	

Original

Sustituto

Original	Sustituto





Original	Sustituto
1 TV Sound	1
2 TV Sound	2
3 TV Sound	3
4 TV Sound	4
5 TV Sound	5
6 TV Sound	6
7 TV Sound	7
8 TV Sound	8
9 TV Sound	9
10 TV Sound	Guide / EPG / -/--
0 TV Sound	0
+10 TV Sound	Fav / Marker / PC
Play	Play / Slow
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Rec Pause	Rec / Rec Mode

Original	Sustituto
Stop	Stop / Hold
TV Sound	Sound / Title

