

 

 


 

 
 

 

 
 
 
 

 

 
 
 







 









 



 
 
 
 
 
 
 
 
 




 


 


 







Original	Sustituto
 Standby/On Audio	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide
 +10/100+	 Pre Ch
 Sleep	 Sleep
 Play Mode	 Shift + Play
 DSP Mode	 3D
 Up	 Up

Original	Sustituto
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Setting	 Options
 DVD Menu	 Menu
 Muting	 Mute
 Theater Position	 Media
 Tv/Video	 TV/R
 <</B.Search	 <<
 F.Search/>>	 >>
 I<</Rew/Tuning	 I<<
 Play	 Play
 Stop	 Stop
 Tuning Up/FF/>>I	 >>I





 

 
 
 
 
 

 

 
 
 

 


 
 

 
 






 







Original	Sustituto	Original	Sustituto
 Pause/Strobe	 Pause	 PTY-	 Shift + Left
 Channel+	 Ch +	 EON	 Shift + Ok
 Channel-	 Ch -	 RDS Display	 Shift + Info
 Subtitle	 Subt	 AUX	 Format
 Audio	 Dual	 FM/AM	 Smart
 Title	 List	 DVD	 D. Menu
 Decode	 AV	 1 AUX-FM/AM	 Shift + 1
 Zoom	 Eject	 2 AUX-FM/AM	 Shift + 2
 Return	 Back	 3 AUX-FM/AM	 Shift + 3
 Display	 Info	 4 AUX-FM/AM	 Shift + 4
 Digest	 Text	 5 AUX-FM/AM	 Shift + 5
 Angle	 Red	 6 AUX-FM/AM	 Shift + 6
 Choice	 Yellow	 7 AUX-FM/AM	 Shift + 7
 Time	 Shift + AV	 8 AUX-FM/AM	 Shift + 8
 EON Select	 Shift + Up	 9 AUX-FM/AM	 Shift + 9
 PTY Search	 Shift + Down	 0/FM Mode	 Shift + 0
 PTY+	 Shift + Right	 10 AUX-FM/AM	 Shift + Guide





Original	Sustituto
 Standby/On Tv	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide
 +10/+100	 Pre Ch
 Tv Return	 Back
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Channel+	 Ch +

Original	Sustituto
 Channel-	 Ch -



